

Phone: (718) 507-8844 **Fax:** (718) 565-6018

Email: info@irauch.com

Address: 32-20 112th St, East Elmhurst, NY 11369

Fig 333: Roller Support




Service Application:

The adjustment of the pipe line is had by turning the top nut which raises or lowers the pipe to desired pitch. The lower nut is then tightened locking support into position and prevents loosening due to vibration. To select the correct size Roller Support for use with Covered Piping and Pipe Covering Protection Saddles, refer to sizes shown in $\underline{\text{Fig } 142}$ table.

Ordering:

Order by size and figure number. Made special to customer order. Dimensions in inches.

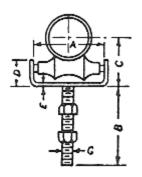

Pipe Size	Recom. Load, Ib.	A	В	С	D	Steel Size E	Rod G	Weight per 100
2 2½ 3 3½	400	2½ 3½ 4 4½	6	2½ 3¼ 3½ 35/8 4	11/8 115/16 2 21/16	1/4 × 11/4	1/2	209 243 265 272
4 5	600	5½ 6½	6	45/16 51/16	2½ 2¾ 2¾	1/4 x 11/2	5/8	343 426
6 8	900	71/4 93/8	6	6 71/4	2 ¹⁵ / ₁₆ 3 ¹ / ₈	³⁄8 x 2	3/4	77 1 993
10 12	1100 1100	1 1½ 13½	6	8 ¹³ / ₁₆ 10 ⁵ / ₁₆	3% 3%	½ x 2	1	1665 1934